



# Nikon COOLPIX P500 Battery Replacement

Details the location of the battery pack and how to replace it.

Written By: Carmen Dang



## Step 1 — Battery



⚠ Electric shock is a huge risk if the battery is not removed while taking the camera apart.

- Press down and forward on the battery cover latch.
- Push the orange latch, in the direction of the arrow on it, to release the battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-19 12:46:35 PM.